

AQUAJAM™

AQUABUDS | AJ-WE032

WATERPROOF WIRELESS EARPHONES


INSTRUCTION MANUAL

ENG



AQUABUDS


WHAT'S IN THE BOX

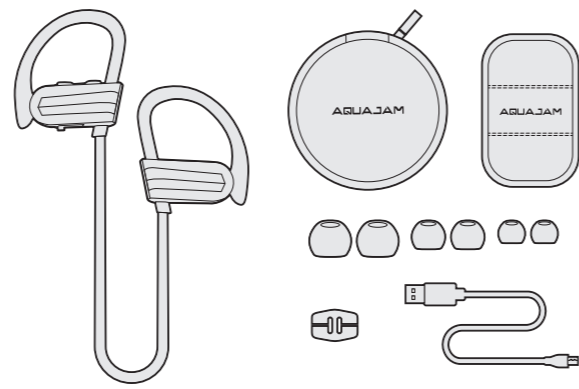

AJ-WE032	x1	Ear Tips (S/M/L)	x1 Pair Per Size
Protective Hard Case	x1	Cable Cinch	x1
Detachable Floating Strap	x1	Charging Cable	x1


AQUABUDS

CONTROL INTERFACE

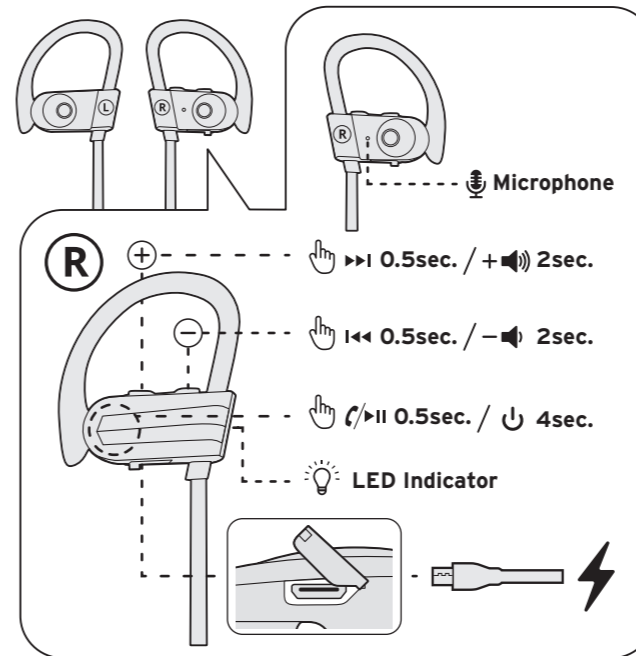

AQUABUDS


CHARGING

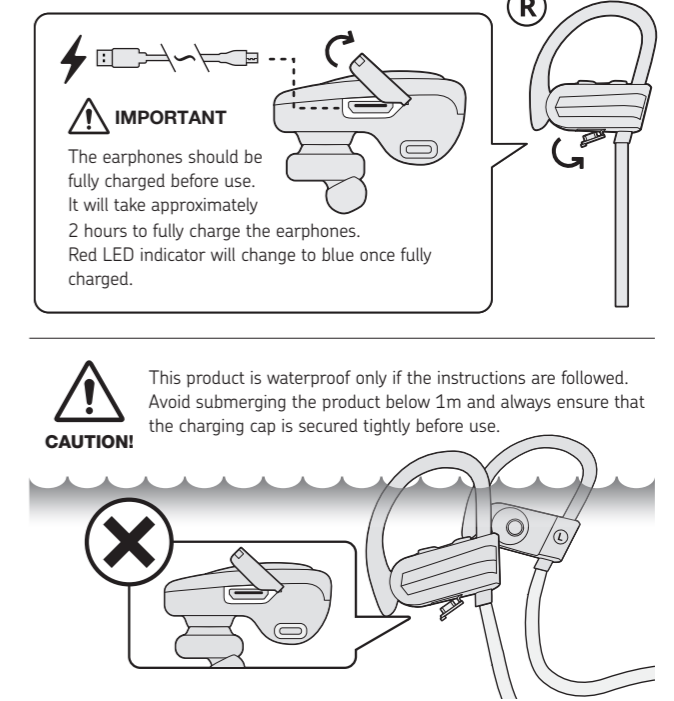

AQUABUDS

BLUETOOTH PAIRING


Long press the main button to turn on the unit, it will automatically enter pairing mode. The LED indicator will alternate between red and blue while the unit is in pairing mode.

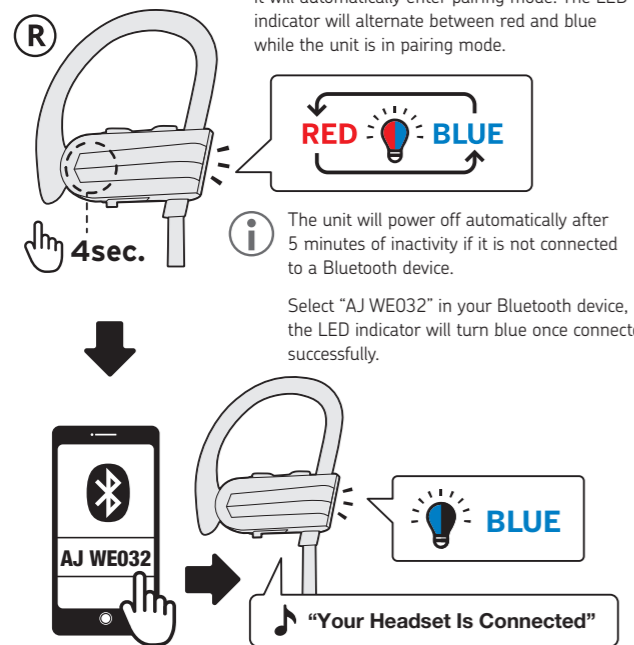

AQUABUDS


ANSWERING CALLS

To answer incoming calls, short press the main button, and long press the same button to reject calls.

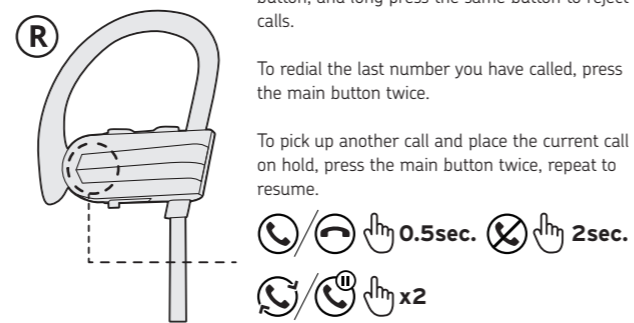

VOICE CONTROL


To activate voice control of your mobile device, long press both the volume up and volume down buttons.

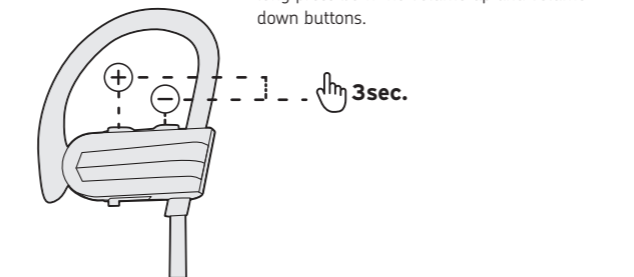

AQUABUDS

MULTIPLE CONNECTION

This unit can be connected to two Bluetooth devices at the same time, which allows users to listen to music and answer calls with both devices without disconnecting. In order to connect this unit to a second device, the user will have to complete the pairing procedure between the unit and the device A. Turn off the Bluetooth function on device A, then go ahead proceed Bluetooth pairing with device B, turn on the Bluetooth on device A again after completing the procedure with device B.

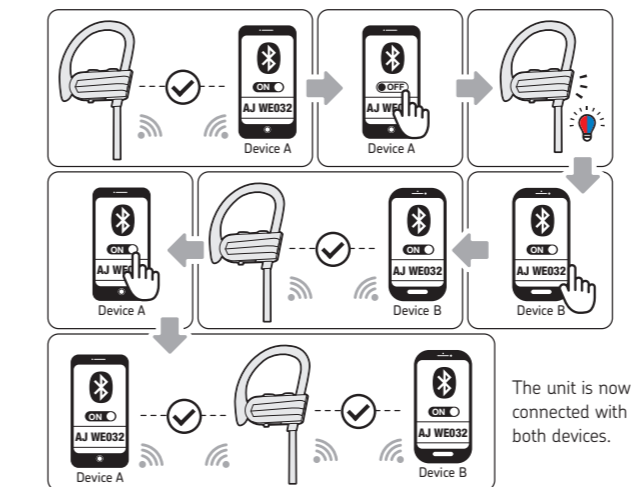

AQUABUDS


MULTIPLE CONNECTION

When the unit is connected to two Bluetooth devices, only music from one device can be heard, if you would like to switch and listen to music from the other device, pause the music on device A, then start the music on device B.

If there is an incoming call from device B while you are having a call on device A, there will be a sound prompt indicating the incoming call, press the main button twice to put the call of device A on hold and answer the call of device B. Repeat to resume.

RESETTING THE UNIT


To reset the unit, long press the main button while the unit is being charged, the blue indicator light will blink 3 times and a sound prompt can be heard.

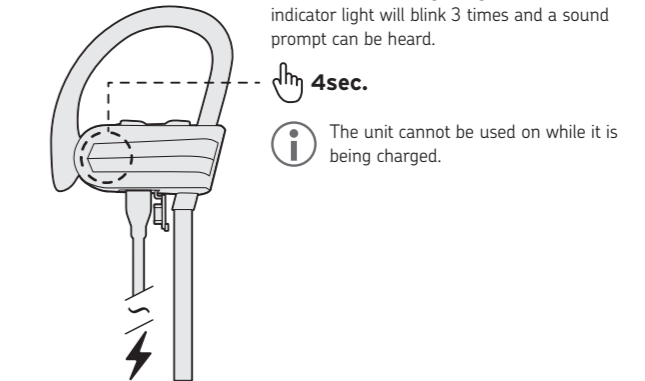

AQUABUDS

ATTACH THE FLOATING STRAP

The detachable floating strap helps to keep the unit afloat, simply put the strap along the cable of the unit, fold the strap and close with velcro.

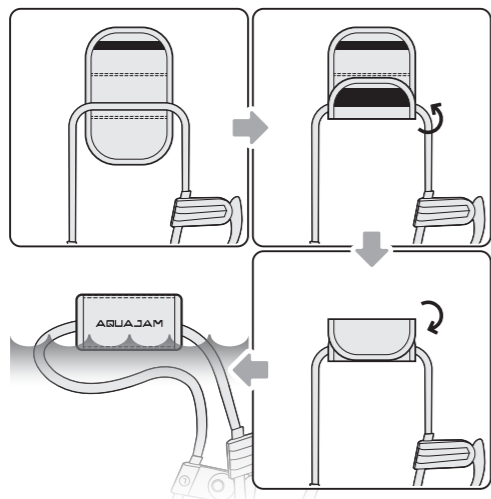

This is not a life saving device. It is designed for use with Aquabuds earphones only. Rinse off the strap with tap water after use in salt water or swimming pool.

AQUABUDS

BLUETOOTH DISTANCE LIMITATION

To get the best audio experience, please keep the distance between the unit and the Bluetooth device within 10meters.

Unit performance can be diminished by obstacles such as walls or metal, and may also be affected by other Bluetooth devices.



STILL NEED HELP?

One of our Aquajam technical support specialists can assist you with your issue. To reach us please contact the Aquajam support team and send an e-mail to support@aquajam.com.

AQUABUDS

CARE AND PRECAUTIONS

The earphones should be fully charged before use.

Do not use any third party USB cable other than that supplied to charge the speaker, as this may affect the charging time.

If the unit cannot be found on your Bluetooth device, please check whether it is in pairing mode by checking the LED indicator.

If the unit is left unused for over two weeks, please recharge it periodically.

For protection during lightning storm, unplug the unit from the electrical outlet and turn off the computer.

This product is waterproof only if the instructions are followed. Avoid submerging the product below 1m.

Always ensure that the charging cap is secured tightly before use. If the unit is placed in water without the cap being sealed, it will damage the unit permanently.

Dry unit completely before opening the charging port. Do not open the cap if the unit is wet or in a wet environment.

Do not place the unit near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

Place the unit in a stable location so that it will not fall causing damage to the unit.

Avoid direct exposure to sunlight for long periods of time and strong magnetic fields.

AQUABUDS

Periodically check the rubber charging cap on the unit for premature wear.

Periodically clean the charging cap with a soft moist cloth. Do not use any oily solvent or chemicals for cleaning.

Rinse off the unit with tap water after use in salt water or swimming pool.

Audio distortion may occur when the batteries are nearing end of charge.

CAUTION: Danger of explosion if battery is incorrectly replaced.

Never disassemble or modify the unit for any reasons to avoid damage and danger.

AQUAJAM™