

Remote control for Smart Light Chains 472-81, -82, -83

To get the remote control to work properly, it's important that the remote control is aimed at the control box on the light chain.



Adjust the brightness or speed in different modes.

ON/OFF

Only white (W), red (R), green (G) or blue (B) solid light. White light is found in warm or cold light.

Buttons with note on (music mode): the light chain flashes in time with music or other sounds in the room where the light chain is placed. 1,2 or 3 – choose from different flashing sequences.

The sensitivity can be increased or decreased by pressing the ± keys on the controller, first press music mode 1, then press ± keys

Timer 1H, 4H eller 8H

Adjustment of brightness

Mode 1, 2, 3, 4, 5 – different flashing functions. Button with two arrows in a circle – scrolls through different flashing functions.

Arrow up and down on the side – choose from different functions in each mode

